

## List of Compatible Device Models

### Multi Monitoring & Control Software 4.3 or later

- As of May 2026 -

When using this software, the settings of the connected display (LED display or flat panel display), the setup items of this software, and the functions that can be used may differ from one display to another. While referring to the table below, check out that flat panel display models are compatible with the software before using them. Any functions that are not listed in the list for compatible display models are not supported by the display.

■ **A list of compatible projector models is available for download from the Panasonic website**  
(<https://docs.connect.panasonic.com/projector/download/application>).

#### List of device models

##### ■ LED display\*1

TL-110AD12A . . . . .	4	TL-165AD19A . . . . .	4
TL-137AD15A . . . . .	4		

##### ■ Flat panel display\*1

TH-32EF1 . . . . .	31	TH-47LF60 . . . . .	32
TH-32EF2 . . . . .	30	TH-47LFX6N . . . . .	9
TH-42AF1 . . . . .	17	TH-47LFX60 . . . . .	9
TH-42LF6 . . . . .	20	TH-48LFE8 . . . . .	31
TH-42LF8 . . . . .	19	TH-49AF1 . . . . .	17
TH-42LF60 . . . . .	32	TH-49CQE1 . . . . .	28
TH-42LF80 . . . . .	19	TH-49LF8 . . . . .	19
TH-42LFE6 . . . . .	33	TH-49LF80 . . . . .	19
TH-42LFE7 . . . . .	32	TH-49LFV8 . . . . .	13
TH-42SF1H . . . . .	16	TH-49SF1H . . . . .	16
TH-43CQ2 . . . . .	29	TH-49SF2 . . . . .	15
TH-43CQE1 . . . . .	28	TH-49SQ1 . . . . .	7
TH-43CQE2 . . . . .	27	TH-49SQE1 . . . . .	28
TH-43EQ1 . . . . .	26	TH-50BF1 . . . . .	22
TH-43EQ2 . . . . .	25	TH-50CQ2 . . . . .	29
TH-43EQ3 . . . . .	24	TH-50CQE2 . . . . .	27
TH-43LFE8 . . . . .	31	TH-50EQ1 . . . . .	26
TH-43SF2 . . . . .	15	TH-50EQ2 . . . . .	25
TH-43SQ2H . . . . .	5	TH-50EQ3 . . . . .	24
TH-43SQ3 . . . . .	24	TH-50LFB70 . . . . .	23
TH-43SQE1 . . . . .	28	TH-50LFC70 . . . . .	23
TH-43SQE2 . . . . .	27	TH-50LFE6 . . . . .	33
TH-47LF6 . . . . .	20	TH-50LFE7 . . . . .	32

TH-50SQ2H	5	TH-75CQE2	27
TH-50SQ3	24	TH-75EF1	31
TH-50SQE2	27	TH-75EQ1	26
TH-55AF1	17	TH-75EQ2	25
TH-55CQ2	29	TH-75EQ3	24
TH-55CQE1	28	TH-75SQ1	7
TH-55CQE2	27	TH-75SQ1H	6
TH-55EQ1	26	TH-75SQ2H	5
TH-55EQ2	25	TH-75SQ3	24
TH-55EQ3	24	TH-75SQE1	28
TH-55LF6	20	TH-75SQE2	27
TH-55LF8	19	TH-80BF1	22
TH-55LF60	32	TH-80LF50	18
TH-55LF80	19	TH-80LFB70	23
TH-55LFE8	31	TH-80LFC70	23
TH-55LFV6	19	TH-80SF2H	14
TH-55LFV8	13	TH-84EF1	31
TH-55LFV9	13	TH-84LQ70	8
TH-55LFV60	19	TH-84LQ70L	8
TH-55LFV70	12	TH-86CQ2	29
TH-55SF1H	16	TH-86CQE1	28
TH-55SF2	15	TH-86CQE2	27
TH-55SQ1	7	TH-86EQ1	26
TH-55SQ2H	5	TH-86EQ2	25
TH-55SQ3	24	TH-86EQ3	24
TH-55SQE1	28	TH-86SQ1	7
TH-55SQE2	27	TH-86SQ1H	6
TH-55VF1H	11	TH-86SQ2H	5
TH-55VF2	10	TH-86SQ3	24
TH-55VF2H	10	TH-86SQE1	28
TH-65BF1	22	TH-86SQE2	27
TH-65BQ1	21	TH-98CQE1	28
TH-65CQ2	29	TH-98CQE2	27
TH-65CQE1	28	TH-98LQ70	8
TH-65CQE2	27	TH-98LQ70L	8
TH-65EF1	31	TH-98SQ1	7
TH-65EQ1	26	TH-98SQ2H	5
TH-65EQ2	25	TH-98SQE1	28
TH-65EQ3	24	TH-98SQE2	27
TH-65LFB70	23		
TH-65LFC70	23		
TH-65LFE7	32		
TH-65LFE8	31		
TH-65SF2	15		
TH-65SQ1	7		
TH-65SQ2H	5		
TH-65SQ3	24		
TH-65SQE1	28		
TH-65SQE2	27		
TH-70LF50	18		
TH-70SF2H	14		
TH-75BQ1	21		
TH-75CQ2	29		
TH-75CQE1	28		

\*1: Note on model groups

The difference in the type of information that can be accessed for “rich information models” and “basic information models” is as follows.

○: Supported    ×: Not supported

Item	Model categorization based on accessible information difference	
	Rich information model	Basic information model
Group Name	○	○
IP Address	○	○
AV Mute	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Power saving setting / Long Life Mode	○*	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
Fan status	○*	×

\* May not be accessible depending on the device.

## Notes

The software is not compatible with any device models not appearing in this “Device model list.”

## Peripheral device list

### ■ Peripheral devices

#### Network camera

Panasonic BB-S Series, DG-S Series, WV-S Series, AW-UN70 Series, AW-HN130 Series, AW-HN40 Series, AW-HE130 Series, AW-HE40 Series, and AW-HR140 network cameras are supported.

Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

## TL-165AD19A / TL-137AD15A / TL-110AD12A

The letters\* that appear at the end of the above model numbers are omitted.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Connection to LED display	IP address	Only fixed IP address supported	
	Web control screen login	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
LED display settings	Eco mode	—	
	Command control	—	
		Port number	—
	CONTROL INTERFACE	—	
	Control protocol	—	
	Network control	ON	
	Port / Command port	— / 1024	
	LAN control protocol	Protocol 2	
	PJLink control	On	
Monitoring and control functions	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Maintenance log save function	○*1	
	Contents list delivery function	○*2	
	Caption function	○	
	Remote preview function or remote preview lite	○*3	

\*1: Saving is only possible when the LED display is turned on.

\*2: This device does not support portrait display.

\*3: When the remote preview lite function is used with this device, the message described in "Display the image input into the device" in the operating instructions of "Multi Monitoring & Control Software" may not be displayed.

# TH-98SQ2H / TH-86SQ2H / TH-75SQ2H / TH-65SQ2H / TH-55SQ2H / TH-50SQ2H / TH-43SQ2H

The letters\* that appear at the end of the above model numbers are omitted.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Connection to flat-panel display	IP address	Only fixed IP address supported	
	Web control screen login	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
Flat-panel display settings	Quick start	ON*1	
	Command control		—
		Port number	—
	CONTROL INTERFACE	—	
	Control protocol	—	
	Network control	ON	
	Port / Command port	— / 1024	
	LAN control protocol	Protocol 2	
PJLink control	On		
Monitoring and control functions	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Maintenance log save function	○*2	
	Contents list delivery function	○	
	Caption function	○	
	Remote preview function or remote preview lite	○*3*4	

\*1: Place of destination : W only

\*2: Saving is only possible when the flat-panel display is turned on.

\*3: To use the remote preview lite function, it is necessary to have Ver. 2.50 or later as the software main version of the flat panel display. You cannot use this function with a software main version earlier than 2.50. You can check the software main version of the flat panel display unit on [Details] of the <Device Property> window. For details, see "Detailed Information Display" in the operating instructions of the "Multi Monitoring & Control Software".

\*4: When the remote preview lite function is used with this device, the message described in "Display the image input into the device" in the operating instructions of "Multi Monitoring & Control Software" may not be displayed.

## TH-86SQ1H / TH-75SQ1H

The letters\* that appear at the end of the above model numbers are omitted.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Connection to flat-panel display	IP address	Only fixed IP address supported	
	Web control screen login	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
Flat-panel display settings	Quick start	ON*1	
	Command control	—	
	Port number	—	
	CONTROL INTERFACE	—	
	Control protocol	—	
	Network control	ON	
	Port / Command port	— / 1024	
	LAN control protocol	Protocol 2	
Monitoring and control functions	PJLink control	On	
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Maintenance log save function	○*2	
	Contents list delivery function	○	
	Caption function	○	
Remote preview function or remote preview lite	○*3*4		

\*1: Place of destination : W only

\*2: Saving is only possible when the flat-panel display is turned on.

\*3: To use the remote preview lite function, it is necessary to have Ver. 1.35 or later as the software main version of the flat panel display. You cannot use this function with a software main version earlier than 1.35. You can check the software main version of the flat panel display unit on [Details] of the <Device Property> window. For details, see “Detailed Information Display” in the operating instructions of the “Multi Monitoring & Control Software”.

\*4: When the remote preview lite function is used with this device, the message described in “Display the image input into the device” in the operating instructions of “Multi Monitoring & Control Software” may not be displayed.

## TH-98SQ1 / TH-86SQ1 / TH-75SQ1 / TH-65SQ1 / TH-55SQ1 / TH-49SQ1

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	dispadmin* <sup>1</sup>
	Password	@Panasonic* <sup>2</sup>
Flat-panel display settings	Quick start	On* <sup>3</sup>
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	— / 1024
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	○* <sup>4</sup>
	Contents list delivery function	○
	Caption function	○* <sup>5</sup>
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: Place of destination : W only

\*4: Saving is only possible when the flat-panel display is turned on.

\*5: To use the caption function, it is necessary to have Ver. 2.00 or later as the software main version of the flat panel display unit. You cannot use this function with a software main version earlier than 2.00. You can check the software main version of the flat panel display unit on [Details] of the <Device Property> window. For details, see "Detailed Information Display" in the operating instructions of the "Multi Monitoring & Control Software".

## ■ TH-98LQ70 / TH-84LQ70

## ■ TH-98LQ70L / TH-84LQ70L

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

## TH-47LFX6N

## TH-47LFX60

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1* <sup>1</sup>
	Password	panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

## TH-55VF2H / TH-55VF2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	dispadmin* <sup>1</sup>
	Password	@Panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
		Port number
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
LAN control protocol	Protocol 2	
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○* <sup>3</sup>
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-55VF1H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/K/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○*3
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-55LFV70

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1* <sup>1</sup>
	Password	panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

## ■ TH-55LFV9

## ■ TH-55LFV8 / TH-49LFV8

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	—
	Password	@Panasonic*1
Flat-panel display settings	Eco mode	Normal
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	—
	Port / Command port	— / —
	LAN control protocol	—
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	×
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the password provided at the time of shipment.

## TH-80SF2H / TH-70SF2H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	dispadmin* <sup>1</sup>
	Password	@Panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○* <sup>3</sup>
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-65SF2 / TH-55SF2 / TH-49SF2 / TH-43SF2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	dispadmin*1
	Password	@Panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○*3
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-55SF1H / TH-49SF1H / TH-42SF1H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1* <sup>1</sup>
	Password	panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○* <sup>3</sup>
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-55AF1 / TH-49AF1 / TH-42AF1

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	ON
	Port number	1024
	CONTROL INTERFACE	—
	Control protocol	Protocol 2
	Network control	—
	Port / Command port	— / —
Monitoring and control functions	LAN control protocol	—
	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment.

## TH-80LF50 / TH-70LF50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/ER/J/U/W)

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	user1*1
	Password	Panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
Monitoring and control functions	LAN control protocol	—
	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	×
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

■ TH-55LF80 / TH-49LF80 / TH-42LF80

■ TH-55LF8 / TH-49LF8 / TH-42LF8

■ TH-55LFV60 / TH-55LFV6

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○*3
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

## TH-55LF6 / TH-47LF6 / TH-42LF6

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
LAN control protocol	Protocol 2	
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

## TH-75BQ1 / TH-65BQ1

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Connection to flat-panel display	IP address	Only fixed IP address supported	
	Web control screen login	User name	Set by user* <sup>1</sup> (dispadmin* <sup>2*3</sup> )
		Password	Set by user* <sup>1</sup> (@Panasonic* <sup>2*4</sup> )
	PJLink* <sup>1</sup>	Password	Set by user
Flat-panel display settings	Eco mode	—	
	Command control	—	
		Port number	—
	CONTROL INTERFACE	—	
	Control protocol	—	
	Network control	ON	
	Port / Command port	— / 1024	
	LAN control protocol	Protocol 2	
	PJLink control* <sup>1</sup>	On	
Monitoring and control functions	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Maintenance log save function	○* <sup>5</sup>	
	Contents list delivery function	○* <sup>6</sup>	
	Caption function	○	
	Remote preview function or remote preview lite	×	

\*1: When software main version of the flat-panel display is 2.00 or later.

\*2: When software main version of the flat-panel display is earlier than 2.00.

\*3: This is the user name provided at the time of shipment.

\*4: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*5: Saving is only possible when the flat-panel display is turned on.

\*6: This device does not support portrait display.

## TH-80BF1\*3 / TH-65BF1\*3 / TH-50BF1\*3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	— / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: Network functions will be disabled for about 1 minute after entering standby mode from a power on state.

■ TH-80LFB70\*3 / TH-65LFB70\*3 / TH-50LFB70\*3

■ TH-80LFC70\*3 / TH-65LFC70\*3 / TH-50LFC70\*3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	DIGITAL LINK/LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: Network functions will be disabled for about 1 minute after entering standby mode from a power on state.

■ TH-86EQ3 / TH-75EQ3 / TH-65EQ3 / TH-55EQ3 / TH-50EQ3 / TH-43EQ3

■ TH-86SQ3 / TH-75SQ3 / TH-65SQ3 / TH-55SQ3 / TH-50SQ3 / TH-43SQ3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: W)

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	—
	Password	—
	PJLink      Password	Set by user
Flat-panel display settings	Power save mode	Disable
	Command control	—
	Port number	—
	SERIAL IN/LAN select	LAN
	Control protocol	—
	Network control	—*1
	Port / Command port	— / —
	LAN control protocol	—
PJLink control	On	
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	×
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: Flat-panel displays have a networking control function, but it is not used when registering devices.

## TH-86EQ2 / TH-75EQ2 / TH-65EQ2 / TH-55EQ2 / TH-50EQ2 / TH-43EQ2

The letters\* that appear at the end of the above model numbers are omitted.

\* Alphabet letters at end (place of destination: J/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Connection to flat-panel display	IP address	Only fixed IP address supported	
	Web control screen login	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
Flat-panel display settings	Quick start	ON*1	
	Command control	—	
	Port number	—	
	CONTROL INTERFACE	—	
	Control protocol	—	
	Network control	ON	
	Port / Command port	— / 1024	
	LAN control protocol	Protocol 2	
Monitoring and control functions	PJLink control	On	
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Maintenance log save function	○*2	
	Contents list delivery function	○	
	Caption function	○	
Remote preview function or remote preview lite	○*3*4		

\*1: Place of destination : W only

\*2: Saving is only possible when the flat-panel display is turned on.

\*3: To use the remote preview lite function, it is necessary to have Ver. 2.50 or later as the software main version of the flat panel display. You cannot use this function with a software main version earlier than 2.50. You can check the software main version of the flat panel display unit on [Details] of the <Device Property> window. For details, see “Detailed Information Display” in the operating instructions of the “Multi Monitoring & Control Software”.

\*4: When the remote preview lite function is used with this device, the message described in “Display the image input into the device” in the operating instructions of “Multi Monitoring & Control Software” may not be displayed.

## TH-86EQ1 / TH-75EQ1 / TH-65EQ1 / TH-55EQ1 / TH-50EQ1 / TH-43EQ1

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	dispadmin* <sup>1</sup>
	Password	@Panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	— / 1024
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	○
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	○* <sup>3</sup>
	Contents list delivery function	○
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: Saving is only possible when the flat-panel display is turned on.

■ TH-98SQE2 / TH-86SQE2 / TH-75SQE2 / TH-65SQE2 / TH-55SQE2 / TH-50SQE2 / TH-43SQE2

■ TH-98CQE2 / TH-86CQE2 / TH-75CQE2 / TH-65CQE2 / TH-55CQE2 / TH-50CQE2 / TH-43CQE2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

			Setting / compatibility
Connection to flat-panel display	IP address		Only fixed IP address supported
	Administrator account	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
Flat-panel display settings	Power Mode		Reactive
	Command control		On
		Port number	—
	CONTROL INTERFACE		—
	Control protocol		—
	Network control		—
	Port / Command port		— / 1024
	LAN control protocol		—
Monitoring and control functions	PJLink control		On
	Auto search (local network) function		○
	Device status monitoring function (Simplified)		○
	Device location information registering function (Map monitoring function)		○
	Command transmission function		○
	Maintenance log save function		×
	Contents list delivery function		×
	Caption function		×
Remote preview function or remote preview lite		×	

■ TH-98SQE1\*1 / TH-86SQE1\*1 / TH-75SQE1\*1 / TH-65SQE1\*1 / TH-55SQE1\*1 / TH-49SQE1\*1 / TH-43SQE1\*1

■ TH-98CQE1\*1 / TH-86CQE1\*1 / TH-75CQE1\*1 / TH-65CQE1\*1 / TH-55CQE1\*1 / TH-49CQE1\*1 / TH-43CQE1\*1

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/W/WA)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

			Setting / compatibility
Connection to flat-panel display	IP address		Only fixed IP address supported
	Administrator account	User name	Set by user
		Password	Set by user
	PJLink	Password	Set by user
Flat-panel display settings	Power Mode		Reactive
	Command control		On
		Port number	—
	CONTROL INTERFACE		—
	Control protocol		—
	Network control		—
	Port / Command port		— / 1024
	LAN control protocol		—
Monitoring and control functions	PJLink control		On
	Auto search (local network) function		○
	Device status monitoring function (Simplified)		○
	Device location information registering function (Map monitoring function)		○
	Command transmission function		○
	Maintenance log save function		×
	Contents list delivery function		×
	Caption function		×
Remote preview function or remote preview lite		×	

\*1: If the software main version of the flat-panel display is 7.1100 or later, it is supported by this software. You can check the software main version of the flat-panel display unit on [Details] of the <Device Property> window. For details, see “Detailed Information Display” in the operating instructions of the “Multi Monitoring & Control Software”.

## ■ TH-86CQ2 / TH-75CQ2 / TH-65CQ2 / TH-55CQ2 / TH-50CQ2 / TH-43CQ2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U)

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	—
	Password	—
	PJLink      Password	Set by user
Flat-panel display settings	Power save mode	Off
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	—
	Port / Command port	— / —
	LAN control protocol	—
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	×
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

## TH-32EF2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: J/U)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1* <sup>1</sup>
	Password	panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○* <sup>3</sup>
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: This device does not support portrait display.

■ TH-84EF1\*5 / TH-75EF1\*5 / TH-65EF1\*5 / TH-32EF1

■ TH-65LFE8 / TH-55LFE8 / TH-48LFE8 / TH-43LFE8

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	—
	Control protocol	—
	Network control	ON
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	○*3*4
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

\*3: To use the content list delivery function, it is necessary to have Ver. 2.02 or later as the software main version of the flat panel display unit. You cannot use this function with a software main version earlier than 2.02. You can check the software main version of the flat panel display unit on [Details] of the <Device Property> window. For details, see “Detailed Information Display” in the operating instructions of the “Multi Monitoring & Control Software”.

\*4: This device does not support portrait display.

\*5: The configuration menu will not appear at startup even when the date and time settings are not configured.

■ TH-65LFE7 / TH-50LFE7 / TH-42LFE7

■ TH-55LF60 / TH-47LF60 / TH-42LF60

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/ER/J/U/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	admin1* <sup>1</sup>
	Password	panasonic* <sup>2</sup>
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
	LAN control protocol	Protocol 2
Monitoring and control functions	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	○
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
	Remote preview function or remote preview lite	×

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.

## TH-50LFE6 / TH-42LFE6

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/J/U/W)

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to flat-panel display	IP address	Only fixed IP address supported
	User name	user1*1
	Password	panasonic*2
Flat-panel display settings	Eco mode	—
	Command control	—
	Port number	—
	CONTROL INTERFACE	LAN
	Control protocol	—
	Network control	—
	Port / Command port	1024 / —
Monitoring and control functions	LAN control protocol	—
	Auto search (local network) function	×
	Device status monitoring function (Simplified)	○
	Device location information registering function (Map monitoring function)	○
	Command transmission function	×
	Maintenance log save function	×
	Contents list delivery function	×
	Caption function	×
Remote preview function or remote preview lite	×	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the flat-panel display.